





Snap-on Caps GPN 1010



www.poeppelmann.com/en/gpn101

Application

The GPN 1010 snap-on caps protect bolts and nuts and offer a high level of corrosion protection. The high version is suitable for longer stud lengths. The caps snap into place under the nut thanks to the all-round clamping edge.

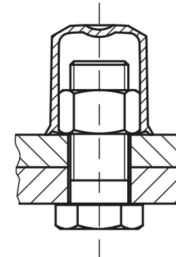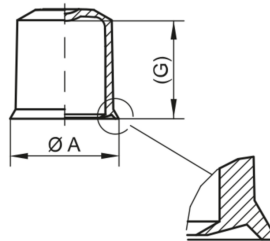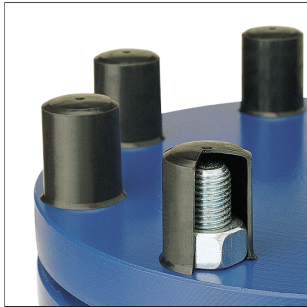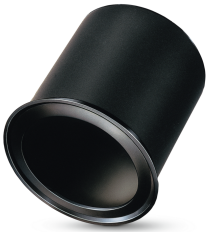

PE-LD
black

Article	SW	A	G	Virgin material
GPN 1010 SW 8	8	12	10,2	10100080000
GPN 1010 SW 10	10	15	13,5	10100100000
GPN 1010 SW 13	13	19	18,5	10100130000
GPN 1010 SW 17	17	24,4	25	10100170000
GPN 1010 SW 19	19	27	27,7	10100190000
GPN 1010 SW 22	22	30,5	33	10100220000
GPN 1010 SW 24	24	33,5	36,6	10100240000
GPN 1010 SW 30	30	41	47	10100300000
GPN 1010 SW 36	36	49,3	56,5	10100360000

Dimensions in mm.

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

Application guide for exterior use

Article	male thread	Fine thread	Pipe thread
GPN 1010 SW 8	M 5		
GPN 1010 SW 10	M 6		
GPN 1010 SW 13	M 8		
GPN 1010 SW 17	M 10	M 8 x 1 M 10 x 1	
GPN 1010 SW 19	M 12	M 12 x 1,5	
GPN 1010 SW 22	M 14	M 14 x 1,5	G 1/4
GPN 1010 SW 24	M 16	M 16 x 1,5	
GPN 1010 SW 30	M 20	M 20 x 1,5	M 20 x 2
GPN 1010 SW 36	M 24	M 24 x 1,5	M 24 x 2

This application table represents guideline values. We would be pleased to send you free samples.

Your added values:



Better.

Protection of nuts and bolts. Optimum corrosion protection. Designed for greater bolt length. The circumferential rim snaps in place beneath the nut.