



Protective Caps GPN 205



www.poeppelmann.com/en/gpn205

Application

The GPN 205 protective caps are suitable for bolts, external threads and pins. The flexible material in combination with internal clamping surfaces help to accommodate larger tolerances. In addition, the line contact over the surfaces reduces material abrasion in the event of sharp edges on the mating part. The easy-to-grip, knurled collar and the clamping surfaces ensure an optimum fit and low-abrasion removal.

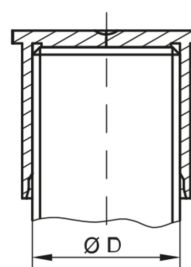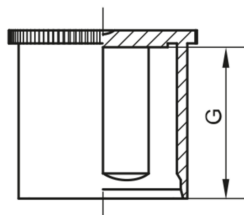

EVA
yellow

Article	D	G	Virgin material
GPN 205 K 10 x 12	10	12,2	20510120000
GPN 205 K 12 x 12	12	12,2	20512120000
GPN 205 K 14 x 14	14	14,2	20514140000
GPN 205 K 16 x 8	16	8	20516800000
GPN 205 K 16 x 16	16	16,2	20516160000
GPN 205 K 18 x 18	18	18,2	20518180000
GPN 205 K 20 x 20	20	20,2	20520200000
GPN 205 K 22 x 22	22	22,2	20522220000
GPN 205 G 1/8	9,7	12,2	20518000000
GPN 205 G 1/4	13,2	14,2	20514000000
GPN 205 G 3/8	16,7	18,2	20538000000
GPN 205 G 1/2	20,6	21,2	20512000000
GPN 205 G 5/8	23	22,2	20558000000
GPN 205 G 3/4	26,4	22,2	20534000000
GPN 205 G 1	33,3	23,2	20510000000

Dimensions in mm.

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

Application guide for exterior use

Article	Male thread	Fine thread	Pipe thread
GPN 205 K 10 x 12	M 10	M 10 x 1,25	
GPN 205 K 12 x 12	M 12	M 12 x 1,25	
GPN 205 K 14 x 14	M 14		
GPN 205 K 16 x 8	M 16		
GPN 205 K 16 x 16	M 16		
GPN 205 K 18 x 18	M 18		
GPN 205 K 20 x 20	M 20		
GPN 205 K 22 x 22	M 22		
GPN 205 G 1/8			G 1/8
GPN 205 G 1/4			G 1/4
GPN 205 G 3/8			G 3/8
GPN 205 G 1/2			G 1/2
GPN 205 G 5/8			G 5/8
GPN 205 G 3/4			G 3/4
GPN 205 G 1			G 1

This application table represents guideline values. We would be pleased to send you free samples.

Protective Caps GPN 205



www.poeppelmann.com/en/gpn205

Your added values:



More versatile.

Flexible material in combination with internal clamping surfaces help to accommodate larger tolerances.



Cleaner.

Production in accordance with VDA Band 19 and ISO 16232 in our cleanroom on request.



Better.

Suitable for studs, external threads, and pins. Easy-to-grip knurled collar and clamping surfaces for firm fit and low-abrasion removal.