



NEW




www.blauer-engel.de/uz30a

Application

The VDA sealing caps GPN 242 are suitable for protecting the connection area of VDA quick-connect spigots and are suitable for variants with and without anti-turn device. The radially symmetrical design enables automated assembly and the non-slip, knurled shaft allows for quick disassembly. Clamping through clamping bars enables pressure equalisation and the VDA quick-release connectors are protected up to the chamfer. The plastic used is made from post-consumer recycled material.

All information about 100% PCR can be found in "Sustainability at Pöppelmann" (see chapter 2) or at www.poeppelmann.com/en/kapsto/Responsibility.html

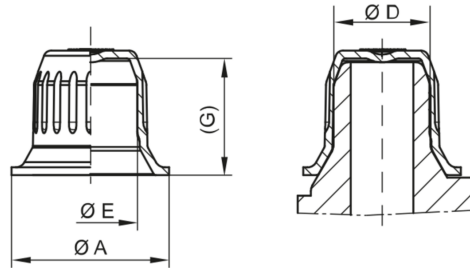

PCR-PE
blue

Article	VDA connector NW	D	A	E	G	100% PCR
GPN 242 NW 6	6	10,4	18,2	10,1	13,9	24200060000
GPN 242 NW 8	8	12,4	20,2	12,1	14,9	24200080000
GPN 242 NSC 12	12	16,6	23,5	15,9	14,9	24201120000
GPN 242 NW 12	12	16,3	23,5	16	14,9	24200120000
GPN 242 NSC 14	14	19,5	25,6	18,8	13,9	24201140000
GPN 242 NW 14	14	17,7	24	17	12,9	24200140000
GPN 242 NSC 16	16	23	29,1	20,2	17,2	24201160000
GPN 242 NW 16	16	22,3	30,6	22	16,9	24200160000
GPN 242 NW 18	18	24,3	33,2	23,9	17,4	24200180000
GPN 242 NW 20	20	26,3	35,2	26	17,4	24200200000
GPN 242 NSC 22	22	28,3	37,4	28,1	18,5	24201220000
GPN 242 NW 26	26	32,5	41,4	32,2	18,4	24200260000
GPN 242 NSC 28	28	34,3	43,3	33,6	18,5	24201280000
GPN 242 NW 32	32	38,8	47,4	38,2	18,4	24200320000
GPN 242 NW 35	35	44	49,6	40,7	18,5	24200350000
GPN 242 NW 40	40	46	54,8	45,2	22,5	24200400000
GPN 242 NW 45	45	51,5	60,4	50,7	21,4	24200450000
GPN 242 NW 50	50	56,5	65,4	55,7	22	24200500000

Dimensions in mm.

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

The article consists of 98 % PCR-PE and 2 % colour based on a PIR carrier. The plastic used consists of 100 % PCR.

For these articles, colour deviations and black dots cannot be completely avoided in production and are permissible. We recommend carrying out functional tests before series production.

Your added values:



More resource-saving.

The plastic used consists of 100 % recycled material.



Better fit.

For protecting the mating surfaces of VDA quick-connect nozzles.



Cleaner.

Production in accordance with VDA Band 19 and ISO 16232 in our cleanroom on request.



Better.

Suitable for variants with and without anti-turn device. Clamping bars enable pressure equalisation.