




Application

The GPN 335 grip closures are used to protect hose fittings in accordance with DIN ISO 12151 during transport and storage. The side grip tab enables fast removal, and flexible ribs serve to accommodate larger tolerances. The thin-walled cone prevents the entry and exit of liquids within certain limits.

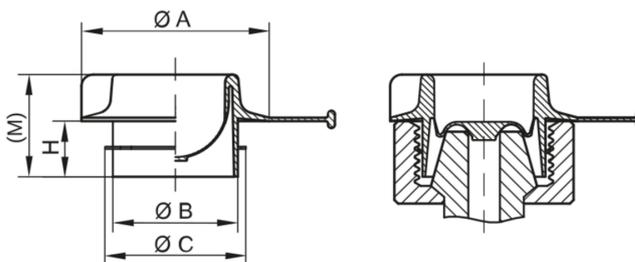

PE-LD
yellow

Article	A	B	C	H	M	Virgin material
GPN 335 M 12 x 1,5	14	10,1	12	7,5	17,5	33512150000
GPN 335 M 14 x 1,5	17	12,1	14	7,5	17,5	33514150000
GPN 335 M 16 x 1,5	19	14,1	16	7,5	17,5	33516150000
GPN 335 M 18 x 1,5	22	15,8	18	8,7	18,7	33518150000
GPN 335 M 20 x 1,5	24	17,8	20	8,7	18,7	33520150000
GPN 335 M 22 x 1,5	27	19,9	22	8,7	18,7	33522150000
GPN 335 M 24 x 1,5	30	21,8	24	10,7	20,2	33524150000
GPN 335 M 26 x 1,5	32	22,5	27,5	8,5	18,5	33526150000
GPN 335 M 30 x 2	40	26,6	30	10	20	33530200000
GPN 335 M 36 x 2	45	32,6	36	12	24,5	33536200000
GPN 335 M 42 x 2	55	38,5	41,5	12	24,5	33542200000
GPN 335 M 45 x 2	55	41,5	45	12	24,5	33545200000
GPN 335 M 52 x 2	65	48,5	51,5	12	26	33552200000

Dimensions in mm.

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

Application guide for internal use

Article	Female thread	Fine thread		Pipe thread
GPN 335 M 12 x 1,5	M 12	M 12 x 1	M 12 x 1,5	
GPN 335 M 14 x 1,5		M 14 x 1	M 14 x 1,5	
GPN 335 M 16 x 1,5		M 16 x 1	M 16 x 1,5	3/8
GPN 335 M 18 x 1,5		M 18 x 1	M 18 x 1,5	
GPN 335 M 20 x 1,5		M 20 x 1	M 20 x 1,5	M 21 x 2
GPN 335 M 22 x 1,5		M 22 x 1	M 22 x 1,5	1/2
GPN 335 M 24 x 1,5		M 24 x 1	M 24 x 1,5	
GPN 335 M 26 x 1,5			M 25 x 1,5	
			M 26 x 1,5	M 27 x 2
			M 27 x 1,5	3/4
GPN 335 M 30 x 2			M 30 x 1,5	M 30 x 2
GPN 335 M 36 x 2	M 39		M 36 x 1,5	M 36 x 2
GPN 335 M 42 x 2	M 45		M 42 x 1,5	M 42 x 2
GPN 335 M 45 x 2			M 45 x 1,5	M 45 x 2
GPN 335 M 52 x 2	M 56		M 52 x 1,5	M 52 x 2

This application table is a guide. We will be happy to send you free test samples. For openings and bores without threads, please select according to functional dimensions B and C.

Grip Closures GPN 335



www.poeppele.com/en/gpn335

Your added values:



Better fit.

For transport and storage of hose fittings in accordance with DIN ISO 12151.



Saves time.

With tab on the side for fast removal.



Seals better.

A thin-walled cone prevents penetration and leaking of liquids within certain limits.



More versatile.

Flexible rib for accommodating larger tolerances.



Better.

Also suitable as cap for bore holes and internal threads.