


Screw-in Plugs GPN 551



www.poeppelmann.com/en/gpn551

Application

The GPN 551 screw-in plugs offer protection for threads and bore holes against dirt and damage and are particularly suitable for painting. The thick-walled shank can be screwed into threads in a self-tapping manner. The conical shape of the screw-in plugs allows tolerances to be accommodated. The material is heat-resistant up to 180° C for short periods.

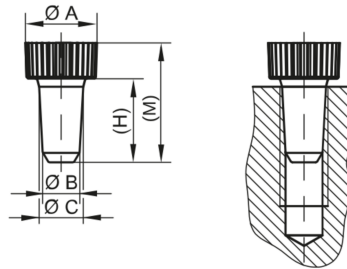

PHT / TPC-ET
red

Article	Thread	A	B	C	H	M	Virgin material
GPN 551 / 002	M 2	7	1,3	2	7	14	55100020000
GPN 551 / 003	M 3	7	2,1	3	12	19	55100030000
GPN 551 / 004	M 4	8	2,8	4	15	22	55100040000
GPN 551 / 005	M 5	9	3,6	5	18	27	55100050000
GPN 551 / 006	M 6	11	4,3	5,8	18	27	55100060000
GPN 551 / 007	M 7	10,5	5	6,5	18	27	55100070000
GPN 551 / 008	M 8	14	6	7,5	18	27	55100080000
GPN 551 / 009	M 9	14	6,5	8,5	18	27	55100090000
GPN 551 / 010	M 10	16	7,6	9,3	21	30	55100100000
GPN 551 / 012	M 12	18	9,3	11	21	30	55100120000

Dimensions in mm.

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

Your added values:



Higher temperature resistance.
Heat resistant to 120 °C.



More robust.
Thick-walled shaft for increased demands.



More versatile.
Tapered plug to accommodate tolerances.



Better.
Self-tapping plug for tight closure of threads or bore holes. Ideal for painting processes.