


Flexible Tapered Closure with side Tab GPN 609



www.poeppelmann.com/en/gpn609

Application

The GPN 609 flexible tapered closure with side tab can be used universally as a cap or plug and protects bore holes and internal threads as well as bolts and external threads. The grip tab with protected tab design enables very quick assembly and disassembly. The conical shape is ideal for accommodating tolerances. The material is heat-resistant up to 150° C.

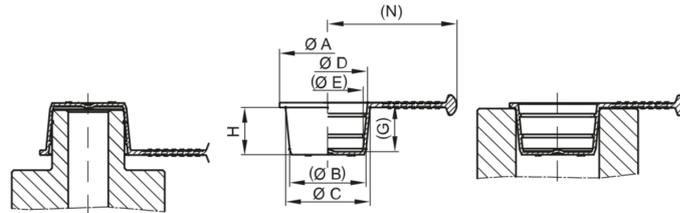

PCR-TPE
yellow

TPE
yellow

Article	A	B	C	D	E	G	H	N	Recycling blend	Virgin material
GPN 609 BL 90	11	7	9	7,8	5,5	9,3	8,8	17,5	60900900085	60900900000
GPN 609 BL 100	12	8	10	8,8	6,4	9,3	8,8	18	60901000085	60901000000
GPN 609 BL 110	13	9	11	9,8	7,4	9,3	8,8	18,5	60901100085	60901100000
GPN 609 BL 120	14	10	12	10,7	8,4	10,1	9,8	19	60901200085	60901200000
GPN 609 BL 130	15	11	13	11,8	9,4	10,3	9,8	19,5	60901300085	60901300000
GPN 609 BL 140	16	12	14	12,7	10,5	11,3	10,8	20	60901400085	60901400000
GPN 609 BL 150	18	13	15	13,7	11,3	11,3	10,8	24	60901500085	60901500000
GPN 609 BL 160	19	14,1	15,9	14,7	12,3	11,2	10,8	24,5	60901600085	60901600000
GPN 609 BL 170	19,9	14,9	16,8	15,7	13,4	11,2	10,8	25	60901700085	60901700000
GPN 609 BL 180	20,9	16,1	17,8	16,7	14,4	11,2	10,8	25,5	60901800085	60901800000
GPN 609 BL 190	21,9	17,2	18,9	17,7	15,4	11,2	10,8	26	60901900085	60901900000
GPN 609 BL 200	22,9	18,1	19,9	18,7	16,4	12,2	11,8	31,5	60902000085	60902000000
GPN 609 BL 210	23,8	19,2	20,7	19,7	17,4	12,2	11,8	32	60902100085	60902100000
GPN 609 BL 220	25	20,3	22,1	20,7	18,1	12,2	11,8	32,5	60902200085	60902200000
GPN 609 BL 230	26	21	23	21,7	19,4	12,3	11,8	33	60902300085	60902300000
GPN 609 BL 240	27	22	24	22,7	20,4	12,3	11,8	33,5	60902400085	60902400000
GPN 609 BL 250	27,9	23,3	24,7	23,7	21,4	12,2	11,8	34	60902500085	60902500000
GPN 609 BL 260	28,9	24,2	25,7	24,7	22,4	12,2	11,8	34,5	60902600085	60902600000
GPN 609 BL 270	29,9	25,2	26,8	25,7	23,4	13,2	12,8	35	60902700085	60902700000
GPN 609 BL 280	31,9	26,1	27,9	26,7	24,5	13,2	12,8	36	60902800085	60902800000
GPN 609 BL 290	33,8	27,2	28,8	27,7	25,4	13,2	12,8	37	60902900085	60902900000
GPN 609 BL 300	35	28,4	30	28,6	26,2	13	12,8	37,5	60903000085	60903000000
GPN 609 BL 330	41	32,1	33	31,7	30	7,7	6,5	40,5	60903300000	60903300000
GPN 609 BL 670	71,8	65,8	66,8	65,4	64,3	11	10,5	50,9	60906700000	60906700000

Dimensions in mm.

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

Your added values:



Higher temperature resistance.

Heat resistant to 150 °C.



Saves time.

Newly designed removal tab for fast handling. Protected tab design.



More versatile.

Can be used universally as plug or cap. The tapered design and the flexible material are ideal for accommodating tolerances.



Better.

To close off bore holes and internal threads, or to protect studs and external threads.