

Sealing Screw Plugs



GPN 730



www.poeppelmann.com/en/gpn730

Application

The GPN 730 sealing screw plugs are suitable for a wide range of metric threads to DIN 13 and pipe threads to DIN EN ISO 228-1. The robust material is suitable for higher demands. The circumferential sealing lip, which is designed without a mould seam, prevents the ingress or leaking of liquids within certain limits. Installation is carried out using a screwdriver or mechanically with a special spanner.

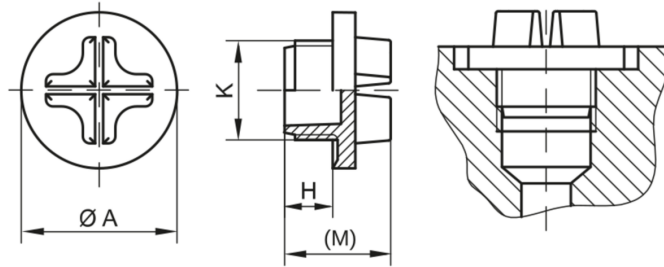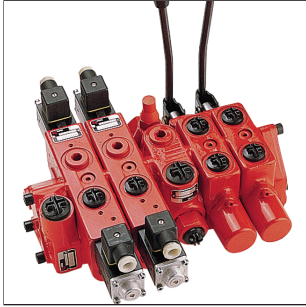

PE-HD
black

Article	A	Thread K	H	M	Virgin material
GPN 730 M 10 x 1	18	M 10 x 1	6,8	15	73010100000
GPN 730 M 12 x 1,5	20	M 12 x 1,5	6,8	15	73012150000
GPN 730 M 14 x 1,5	22	M 14 x 1,5	6,8	15	73014150000
GPN 730 M 16 x 1,5	22	M 16 x 1,5	6,8	15	73016150000
GPN 730 M 18 x 1,5	25,7	M 18 x 1,5	8	16,5	73018150000
GPN 730 M 22 x 1,5	29,3	M 22 x 1,5	10	21,5	73022150000
GPN 730 M 26 x 1,5	34,8	M 26 x 1,5	8	19,5	73026150000
GPN 730 M 27 x 2	34,8	M 27 x 2	8	19,5	73027200000
GPN 730 M 33 x 2	40	M 33 x 2	6	17	73033200000
GPN 730 G 1/4	16,5	G 1/4	8	16	73071240000
GPN 730 G 3/8	20	G 3/8	10	19	73067230000
GPN 730 G 1/2	25	G 1/2	13	23,8	73066490000
GPN 730 G 3/4	31	G 3/4	19	29,8	73073980000

Dimensions in mm.

Articles for metric threads are made of PE-HD and for pipe threads of PA 6.6

Information on materials, colours, designs and use of our products can be found on the website and in chapter 3 'Materials and application'.

Your added values:



More robust.

Imperial screw-plugs are made of robust PA 6.6 for increased demands.



Seals better.

The circumferential sealing lip (no mould-parting feature) prevents the penetration or leaking of liquids depending on the application.



Better.

Installation with screwdriver, or machine with special spanner.